




Installation Guide: **Aluminium Venetian Blinds.**

Parts Included

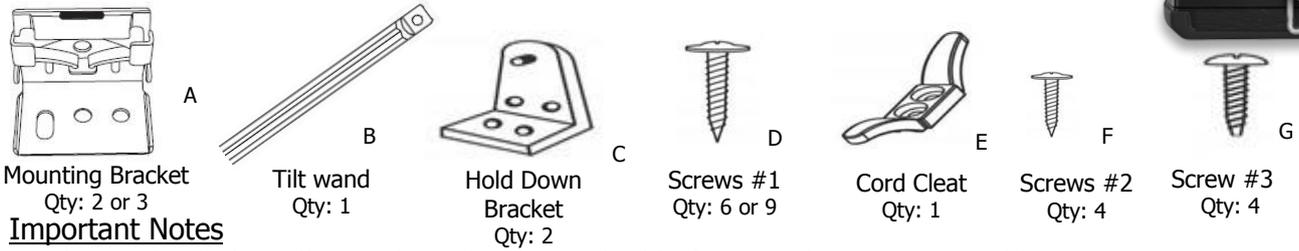

Important Notes

- Please check that all parts have been supplied before you begin to assemble your new Custom Venetian Blind
- Ensure that the blind is mounted level for correct operation

Positioning Blind

As per your order, determine the correct fitting location of mounting brackets and mark where you are going to install the brackets.

- Inside the window frame (Inside Mount) or;
- On the window frame or wall (Outside Mount)

Installing Mounting Brackets

Position the brackets (part A) ensuring that the brackets are fixed approximately 5cm from the end of the blind. The centre bracket (if required) may be positioned as required. Ensure brackets are positioned so as not to interfere with the operation of the blind.

Attaching the Blind

Inside and Outside Mount

- Lift the blind into position and align with the mounting bracket (part A) (Figure 1)
- Push the headrail up until it clicks into place


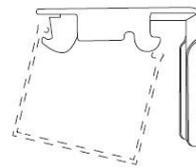


Figure 1

Hold Down Brackets

Using screws provided (part F), screw base of hold down bracket to window reveal or wall. Snap bracket pin ends into the holes at each end of the bottom rail

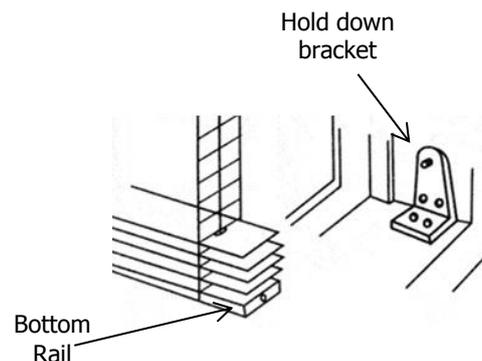

Operating the Blind

Ensure slats of the blind are horizontal before lowering/raising to extend the life of the blind.

To lower blind

Pull cord towards the centre of blind until the cord lock releases. Gently feed cord upwards until the blind is at the desired height then move cord towards the pull cord mechanism and release. The cord lock will engage.

Raising

Pull cord downwards until the blind reaches the desired height, gently release the cord and the blind will lock automatically.

Tilting

Rotate the tilt wand to tilt the slats into the desired position.

(Note these guides are designed for customer made blinds.)

If you have any further questions please contact Super Blinds Mart on 1300 652 027




Installation Guide: **Aluminium Venetian Blinds.**

Reassemble Breakaway Tassel

The breakaway tassel is a safety device, and is intended to pop open when certain pressures are applied. Please follow the steps below to reassemble the tassel.

- Ensure breakaway tassel is open
- Place pull cords into grooves on one side of tassel
- Snap tassel closed

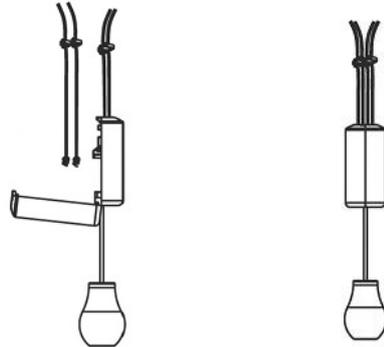


Aluminium Venetian Blind Safety Information

Child Safety Instructions

For Blinds With Cord Control

Warning

- The cord cleat (part E) must be fitted to ensure child safety and to comply with regulations
- The cleat is to be positioned at least 1600mm above floor level, as a child is capable of unwinding a cord from a cleat
- Use two 19mm screws to attach each cleat to the wall. Do not use tape or glue to attach the cleat
- Wrap excess cord around the cleat every time the blind is raised/lowered, to prevent child strangulation
- The cord must not form a loop longer than 220mm and should be wound entirely around the cleat every time

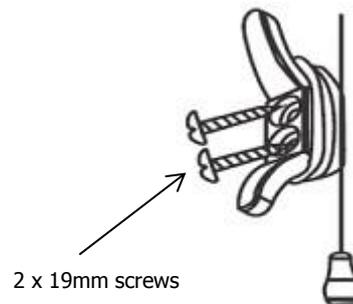

WARNING – ALL WINDOW COVERINGS WITH CORD OR CHAIN

To avoid creating a possible strangulation hazard for children, the corded or chained internal window covering must be installed in such a way that a loose cord or chain cannot form a loop 220mm or longer at a height of less than 1600mm above floor level.

- A cord/chain guide may be installed lower than 1600mm above floor level if the cord/chain is sufficiently secured or tensioned to prevent a loop 220mm or longer being formed
- If a cord/chain guide is installed lower than 1600mm above floor level, it must be designed to prevent a child from being able to remove the cord/chain
- If a cleat is used to secure the cord, it must be at least 1600mm above floor level because a child is capable of unwinding a cord from a cleat

(Note these guides are designed for customer made blinds.)

If you have any further questions please contact Super Blinds Mart on 1300 652 027