



Measuring Guidelines: **Roller Blinds.**

Inside Mount


It is industry standard for a blind fitting into a window reveal to sit flush with the front of the reveal. The factory will make the appropriate deductions for the product type and fixing method.

Width

- Measure neat internal width of the reveal
- Measure at three width points – top middle and base of reveal. This will be the bracket to bracket measurement. Use the smallest width measurement

Drop

- Measure neat internal drop of the reveal
- Measure at three drop points – left, middle and right of reveal. It is not critical to use the shortest drop for this product but client should be advised if window is "out of square". Blinds can only be made square so if window is out of square it may result in irregular light gaps around the blind. Advise your client

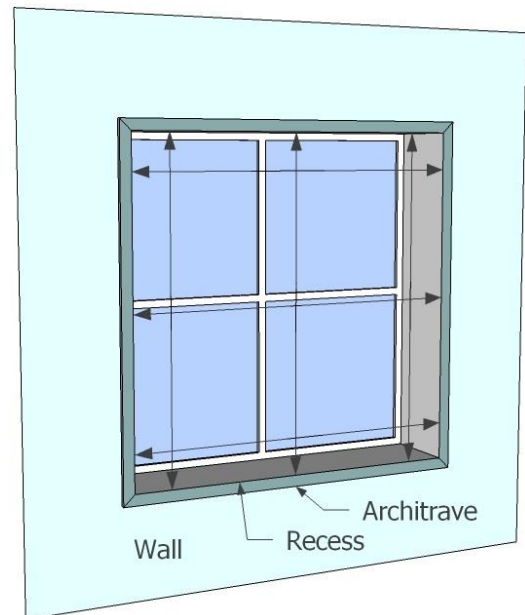

Note – The blind fabric will be narrower than the bracket to bracket measurement.
If the blind is an inside mount there will be light gaps on each side of the blind.

Outside Mount


Blind Fitting onto Architrave

Width

- Measure from outside edge of architrave to outside edge of opposite architrave at three width points. Use the largest width measurement

Drop

- Measure from top of architrave to base of lower architrave or floor. Measure at three drop points. Use the longest drop measurement

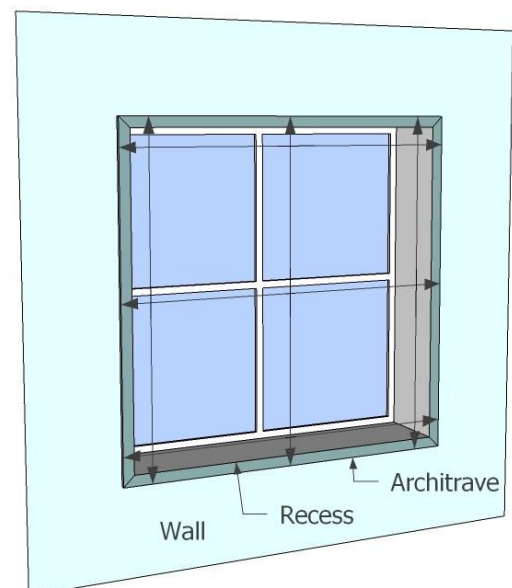

Note – The blind fabric will be narrower than the bracket to bracket measurement.
Some architrave will be visible on each side of the blind. Measuring and installing the blind on the wall past the architraves will avoid the architraves being visible on the sides when the blind is drawn down (check for solid fixing point for brackets).



Measuring Guidelines: **Roller Blinds.**

Outside Mount

Blind Fitting onto Wall

Used in situations where there is no architrave, or when you wish to reduce the amount of window area that will be covered by the stack up of the blind.

Width (No architrave present)

- Measure minimum of 50mm past each side of window opening at the top

Width (Architrave present)


- Measure minimum of 30mm past edge of the architrave

Drop


- If fitting blind into plaster or concrete measure minimum of 70mm above window opening to a minimum of 50mm below window opening, or to the floor
- If fitting blind into brick, measure from the top of the first brick to a minimum of 50mm below window opening, or to floor

"Tips to Remember"

Write all measurement in millimetres.
Measure width first then the height.
Use metal tape measure not a ruler.
Never hurts to have a helping hand.

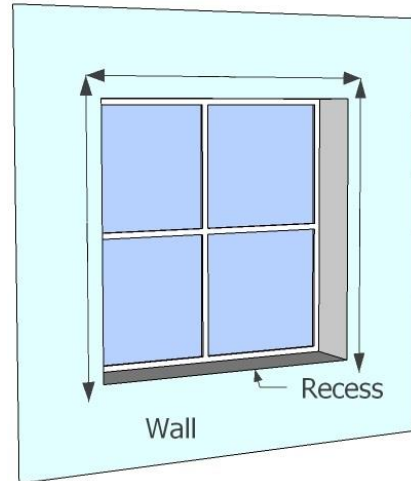

No Architrave

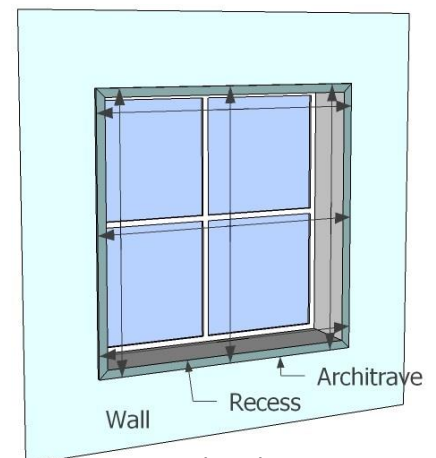

With Architrave